



# GUITAR DISPLAY STAND GS526B PLUS USER MANUAL

## Step 1:

Raise or lower the upper section of the stand to desired position and tighten the knob to secure it in place (see picture 1).

*\*A safety pin is provided to be inserted through the main shaft of the stand above the height adjustment knob for maximize security.*


## Step 2:

Loosen the knob, adjust the height of the lower section of the AGS yokes to the desired position and tighten the knob to secure it in place (see picture 1).

## Step 3:

Adjust both the upper and lower section of the back rests to the desired position and make sure the back rests are aligned with the AGS yokes accordingly (see picture 1).

*\*Please note that the two layers of instruments should face different directions (see picture 2).*

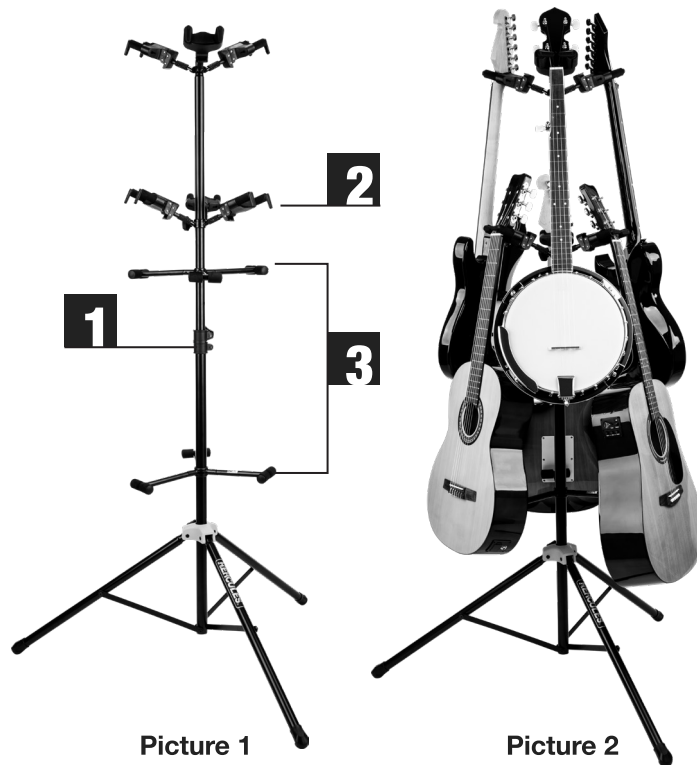

Picture 1

Picture 2