






DG177B / DG177BB MODULAR CLAMP-ON ARTICULATING MIC ARM SYSTEM USER MANUAL

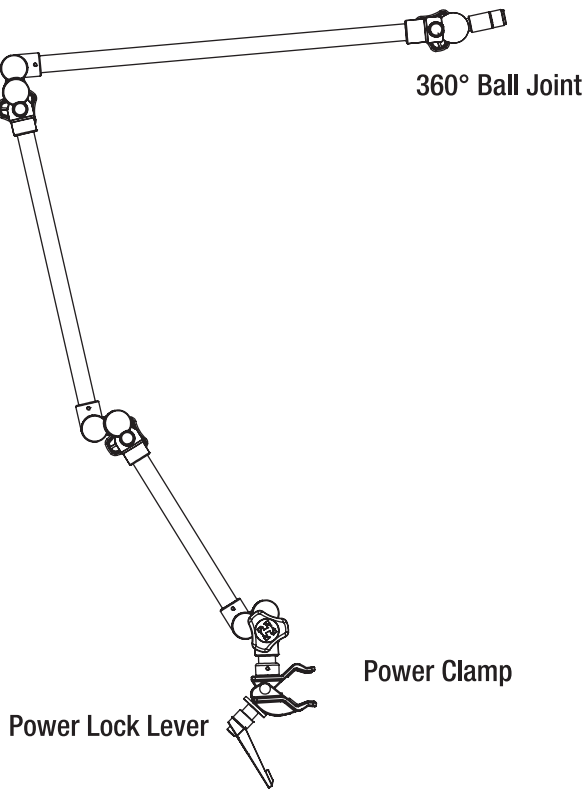


SEPARATION: Turn the joint knob counterclockwise to separate the arm segments.

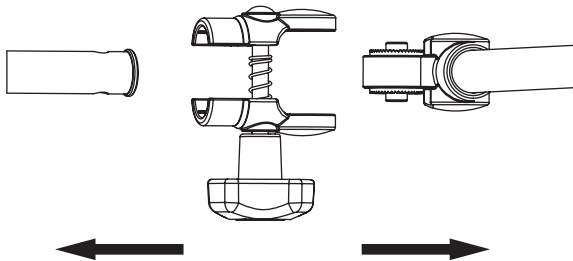


Place segment in and lock firmly by turning joint knob clockwise.

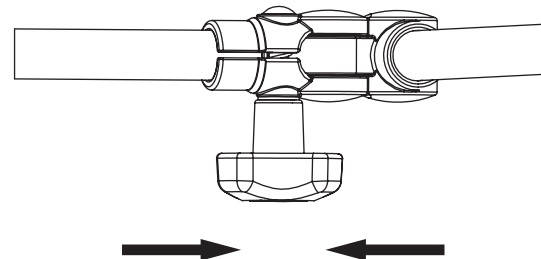


CONNECTION: Make sure the alignment groove is properly seated against the tube edge.

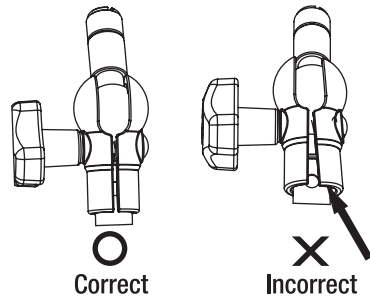


JOINT KNOB: Adjust to the desired angle, then tighten the knob.

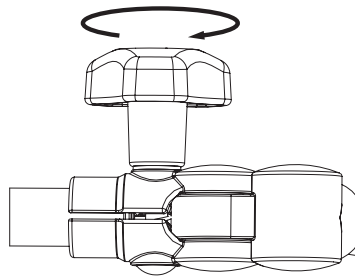

Assemble in different configurations as needed.

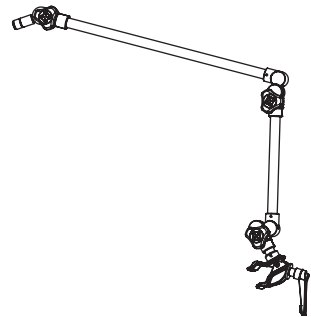


COMPONENTS: Select segments.

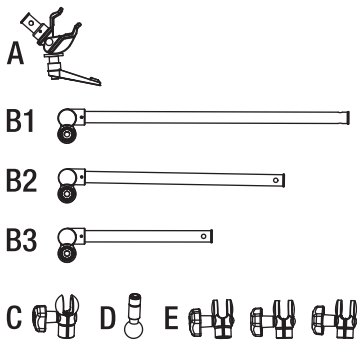


COMPONENT KEY

ID	DG177B (single unit)	DG177BB (double pack)
A	Power Clamp Base x 1	Power Clamp Base x 2
B1-3	Primary Arm Segments	Primary Arm Segments
	B1: 40 cm x 1	B1: 40 cm x 2
	B2: 30 cm x 1	B2: 30 cm x 2
	B3: 20 cm x 1	B3: 20 cm x 2
C	360° Ball Joint x 1	360° Ball Joint x 2
D	3/8"-5/8" Mic Thread Adapter x 1	3/8"-5/8" Mic Thread Adapter x 2
E	Joint connector x 3	Joint connector x 6
F	n/a	Bag x 1

DESK MOUNT:
Secures firmly to desk edges.

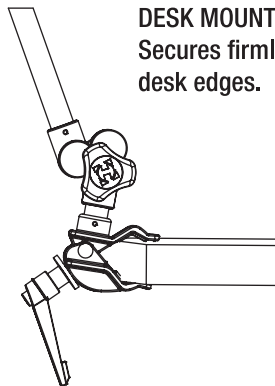

STAND MOUNT:
Clamp on round/square tubes (drum racks, stands).

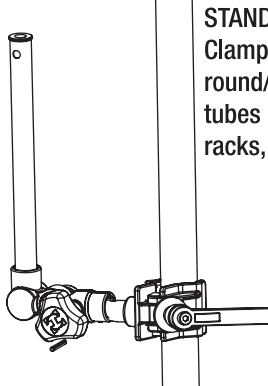

****Safety Notice:** Always ensure all knobs and levers are fully tightened/locked before use to prevent mic sagging or falling.